


KEY

- 1. Permatex 300 Geotextile
- 2. 150mm deep Permavoid on 30-50mm blinding layer
- 3. Permatex 300 separation geotextile (or Permafilter Geotextile if additional treatment required)
- 4. Treated timber edging (Or other Edging detail acceptable)
- 5. Slimblock 50 Paving with sand bedding layer
- 6. Soil graded to edging (if required)

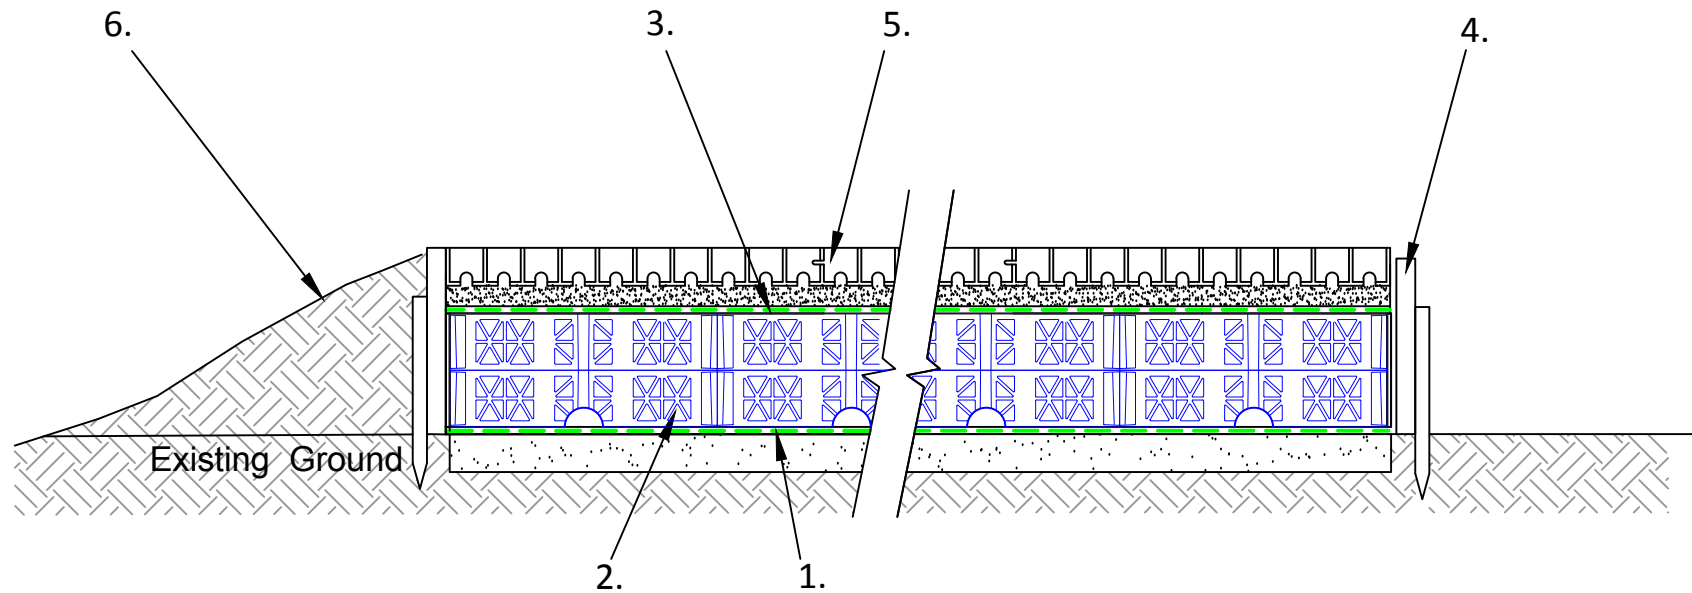

TITLE
Permavoid c/w SlimBlock Surfacing

DRAWN BY PP	SCALE 1:10	DATE 01/14	CHECKED BY PT
DRAWING NO IG-SD-AR-GP-150		REVISION	APPROVED